
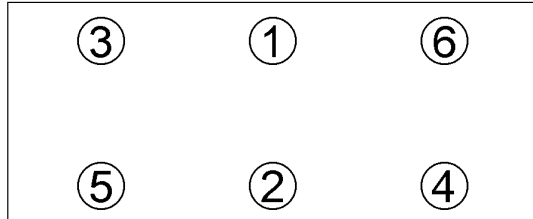


<b>Anziehvorschrift für Zylinderkopf</b>	<b>540.500</b>	 Das Original
<b>Tightening Instructions for Cylinder Head</b>		
<b>Instructions de serrage pour culasse</b>		
<b>Prescripciones de apriete para culatas</b>		
	passend für / suitable for adaptable à / adaptable a	<b>Subaru</b>

Schraubenkopf / Head shape      Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete  
Tête de vis / Cabeza de tornillo



- |             |   |                |
|-------------|---|----------------|
| Anziehen/   | * | 29 Nm          |
| Tightening/ |   | 69 Nm          |
| Serrage/    | ➤ | loosen -180°   |
| Apriete     | ➤ | -180° (again)  |
|             |   | 1 and 2, 34 Nm |
|             |   | 3 to 6, 15 Nm  |
|             | ➤ | 90°            |
|             | ➤ | 90°            |

Zeichenerklärung / Explanations / Explication / Explicacion

*	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

**Motortyp / Engine type / Type de moteur / Tipo de motor**

Subaru MC EJ25  
Forester 2,5 ltr. 12.03- 155 KW  
Legacy III Station Wagon 2,5 ltr.12.98-08.03 115

ElringKlinger AG, Max-Eyth-Str.2  
72581 Dettingen / Erms. Tel. 07123/724 601

**\*540.500\***